

InDash-CarPC V2 (Revision Januar 2007)

Minimum BIOS Settings:


- 1.) Load Fail-Safe Defaults
- 2.) Set First Boot Device to "HDD0" in "Advanced BIOS...".
- 3.) In the "Advanced Chipset..." menu: Select Display Device to "CRT" (this applies for every VIA ITX system)
- 4.) "Integrated...": USB Keyboard Support set to "Enabled"

Installation: Remote console of the InDash V2 CarPC: (Front LCD display program is included)

The software for the remote control and also for the LCD display at the front panel is located on our CarTFT.com CD. Do not open the CD per auto run function, but with "Explorer":




Choose the folder "InDash PC" and then "setup". There you can run the imonsetup.exe:

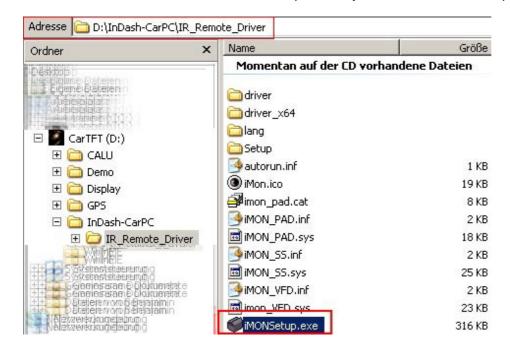





Here you can see the following installation steps picture by picture:

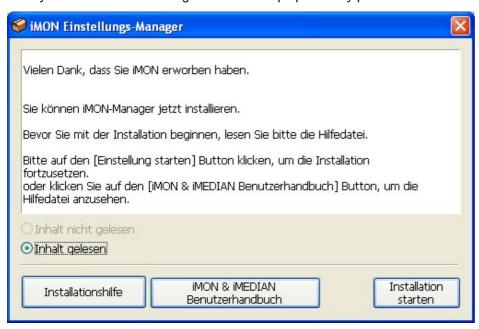




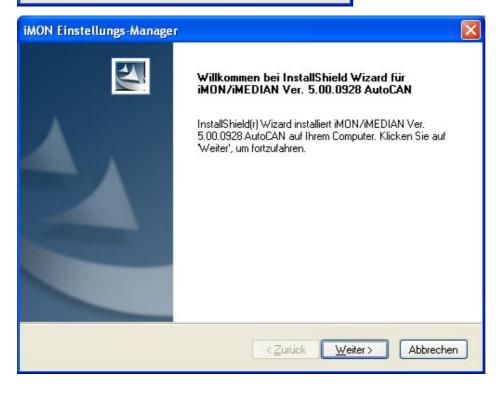



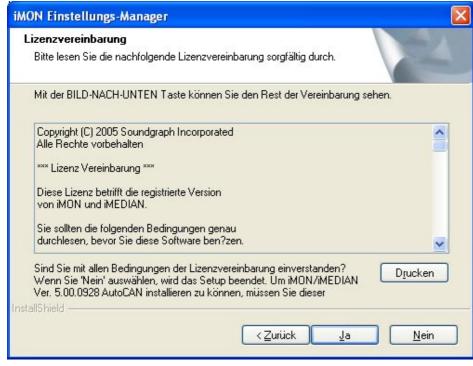

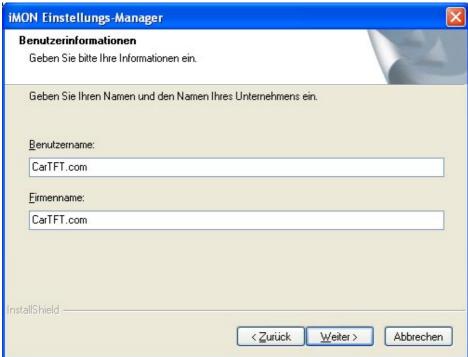











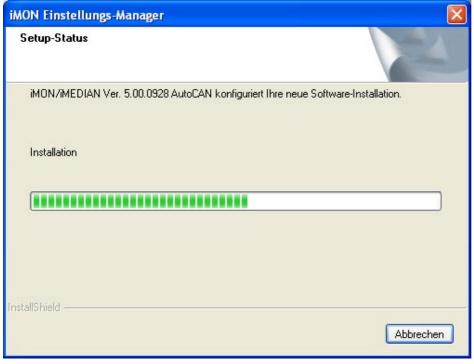




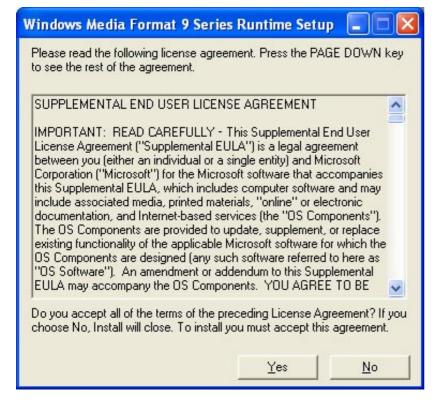





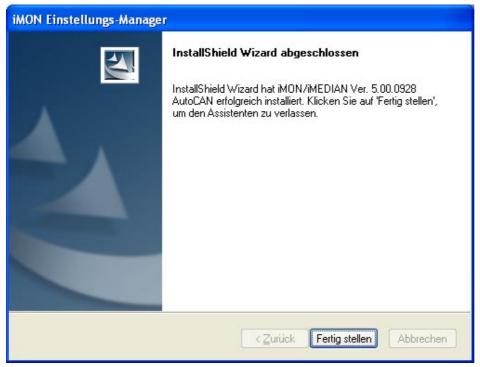

After the installation the auto update manager starts immediately to search & find the latest version to download, if you are online:




With a right click on the iMon field below ...





... you can get into the setup menu of iMon with the "iMon Manager". Here you can disable the auto-update in "Version / Update" for example:

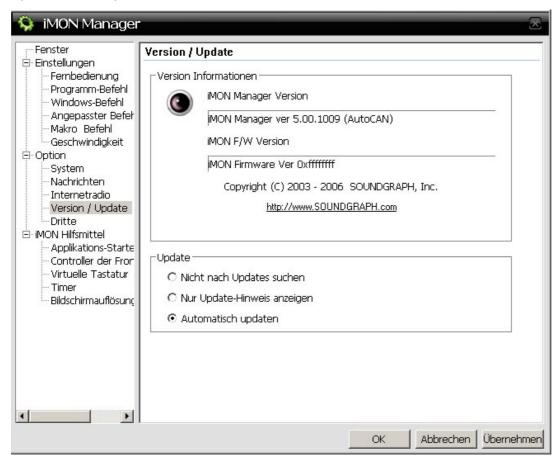


Or you can change your display resolution with the "Display resolution changer":





The program has a virtual keyboard in "iMon-tools" also:

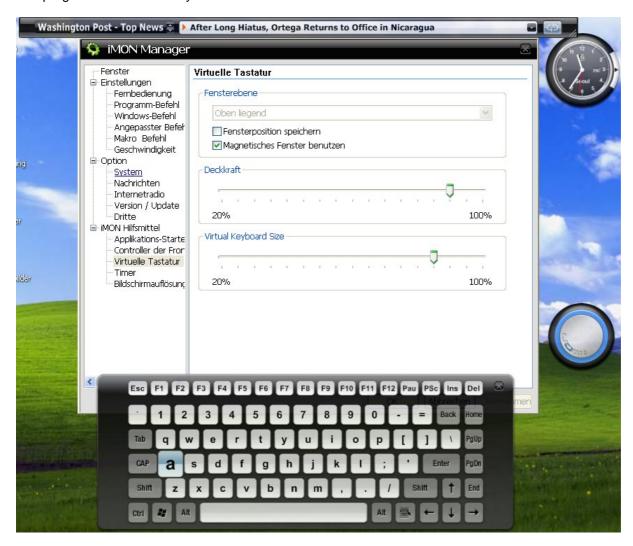

You can also configure the local time, your favourite news ticker, internet radio fm and more.

So for example the LCD display looks like, if it changes and represents the system information in short intervals: (Of course this can be constituted after your personal wish.)



Author: B. Lambert - CarTFT.com

Last update: 2006-01-23